


Sistem de securitate pentru autoturisme


Hornet 740T

Instructiuni de montaj

pentru autoturismele Dacia Logan si Sandero

Referinta Dacia: 6001 998 806

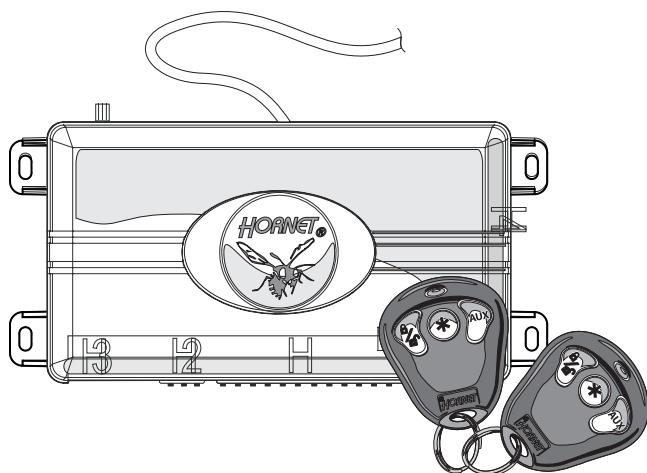

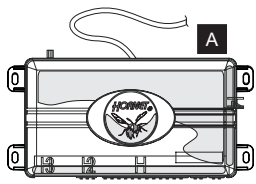

A



B




S




D1




I

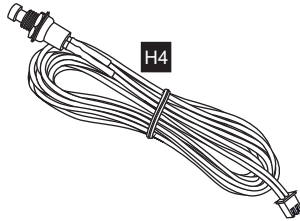


H4

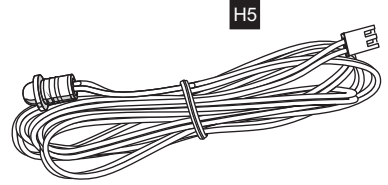

H5

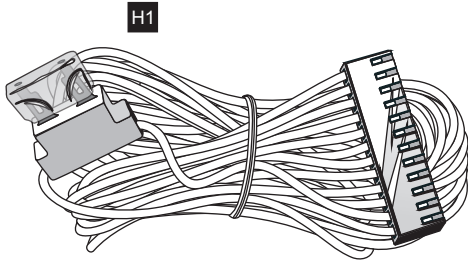


H1

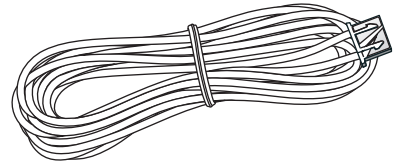


H2




x 3




x 6




1

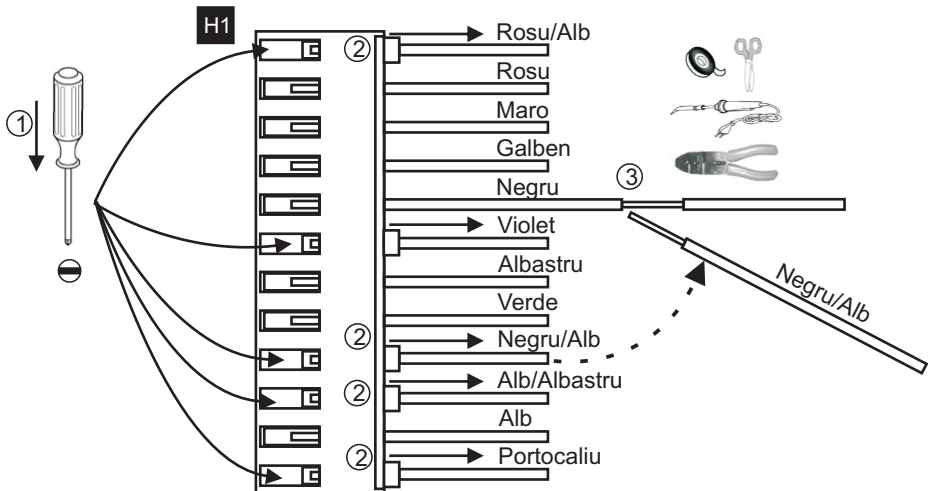

2

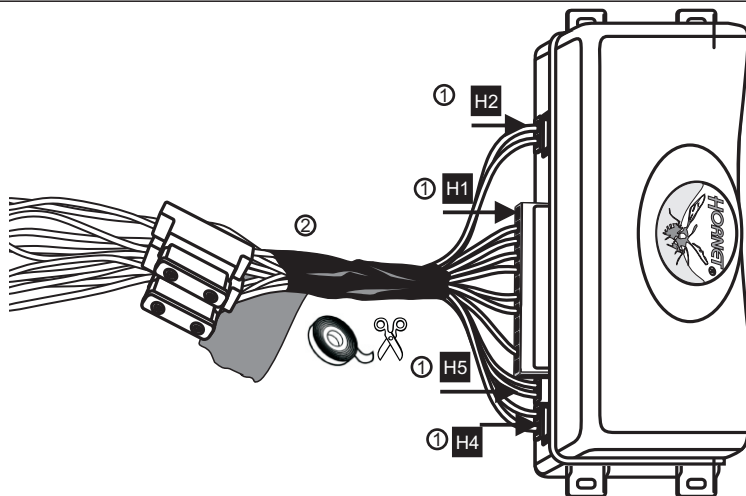


3

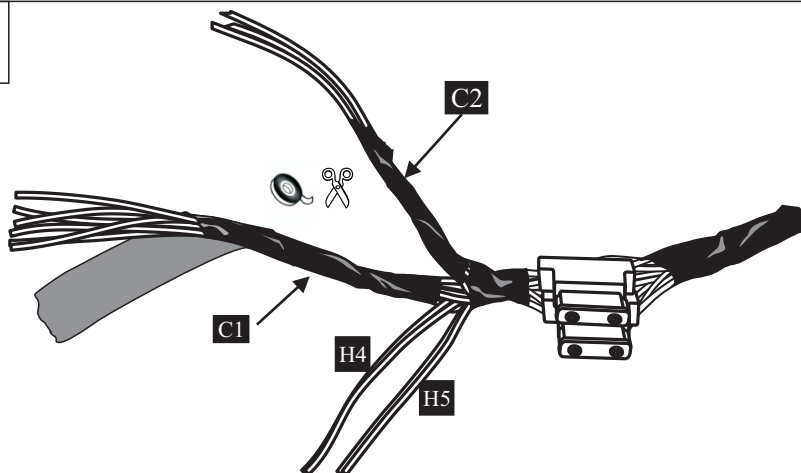


- C2**
- Maro (H1)
 - Albastru (H1)
 - Negru/Alb (H1)
- C1**
- Rosu (H1)
 - Verde(H1)
 - Galben(H1)
 - Negru(H1)
 - Alb (H1)
 - Albastru (H2)
 - Verde(H2)


4

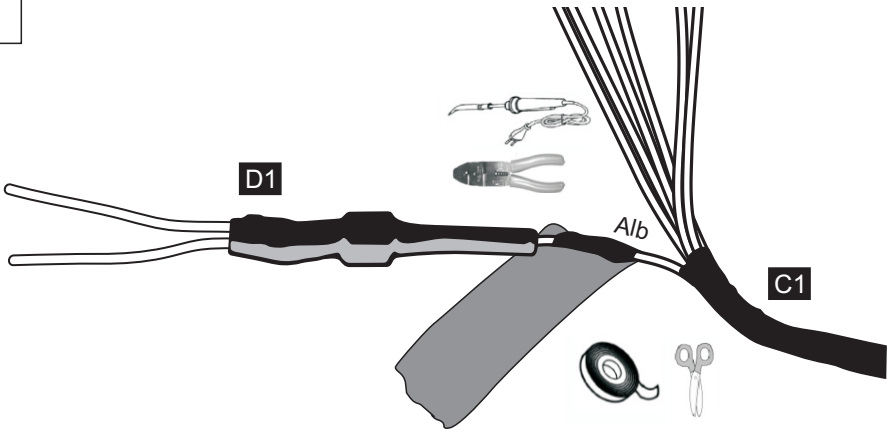


5

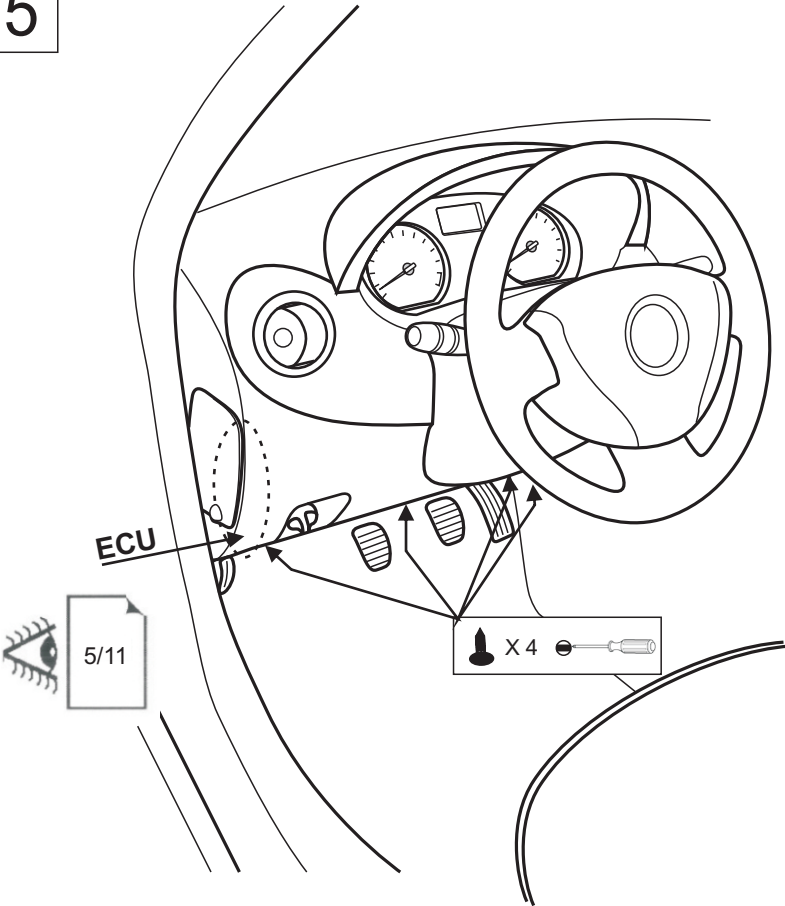

6

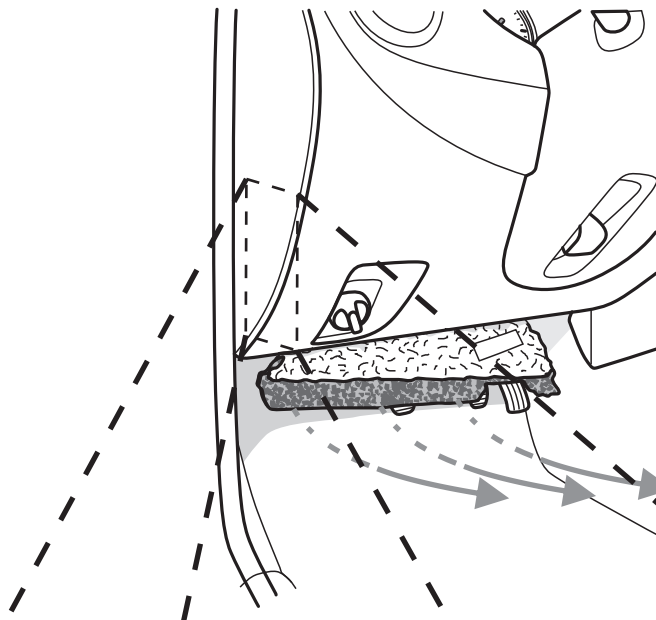


7

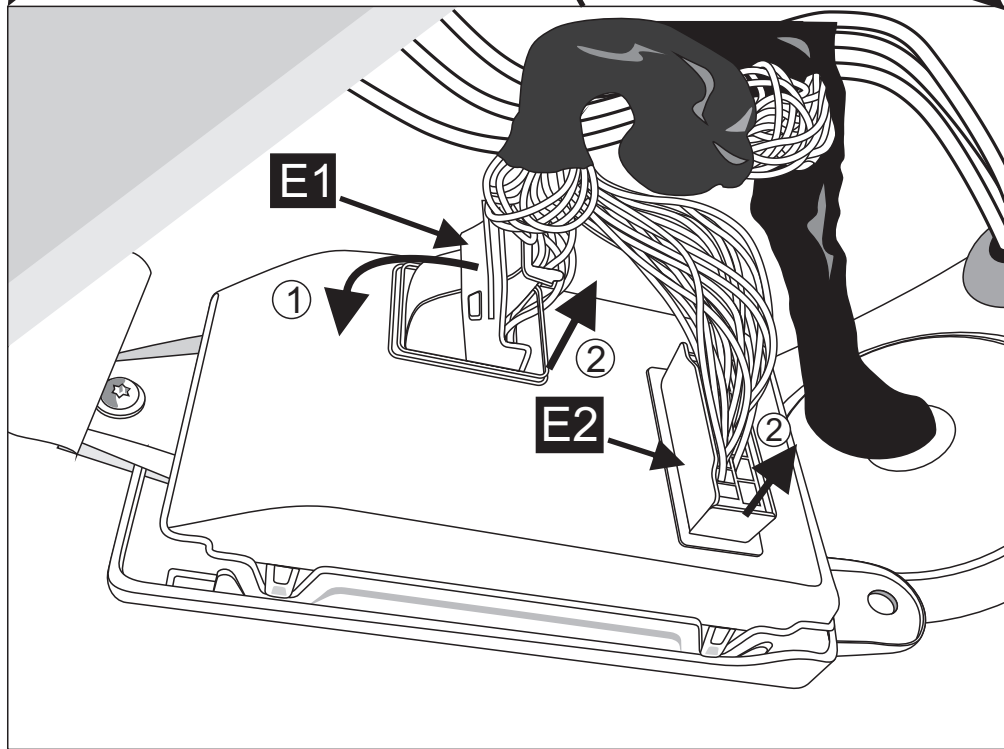

8




10/10

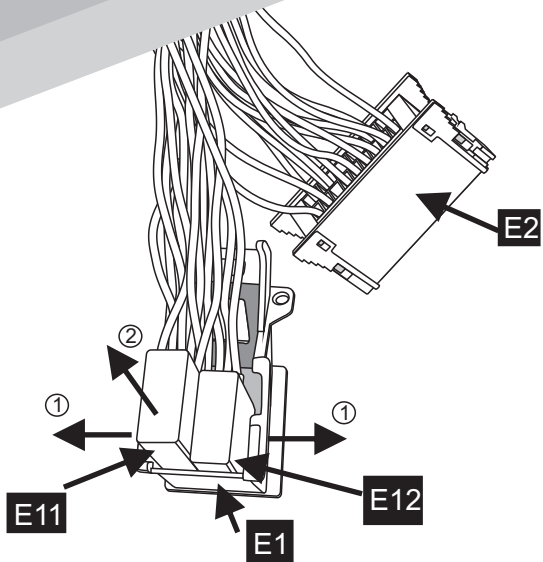


9




10/11

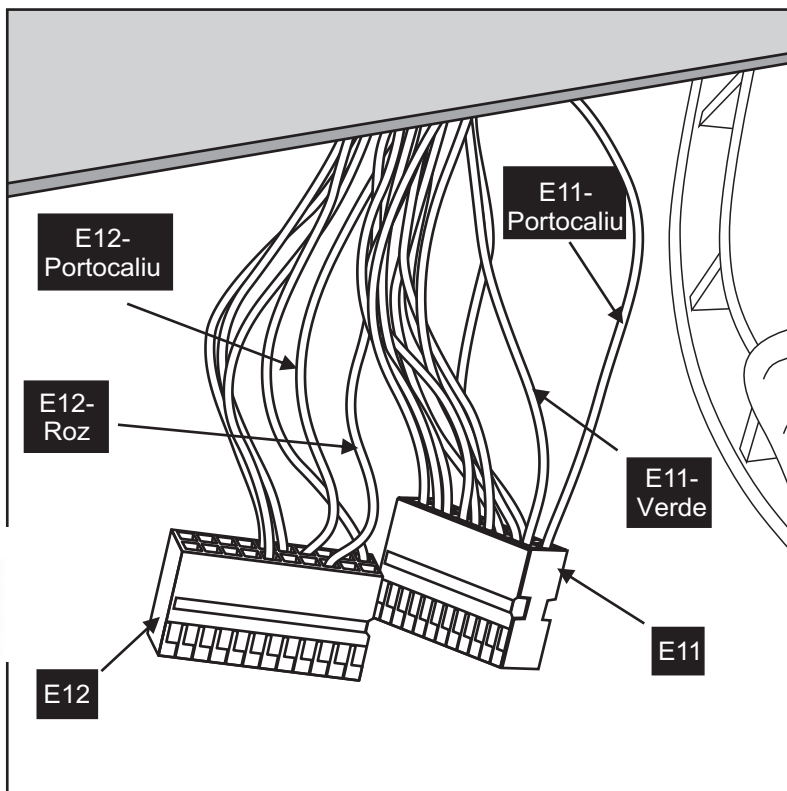


10

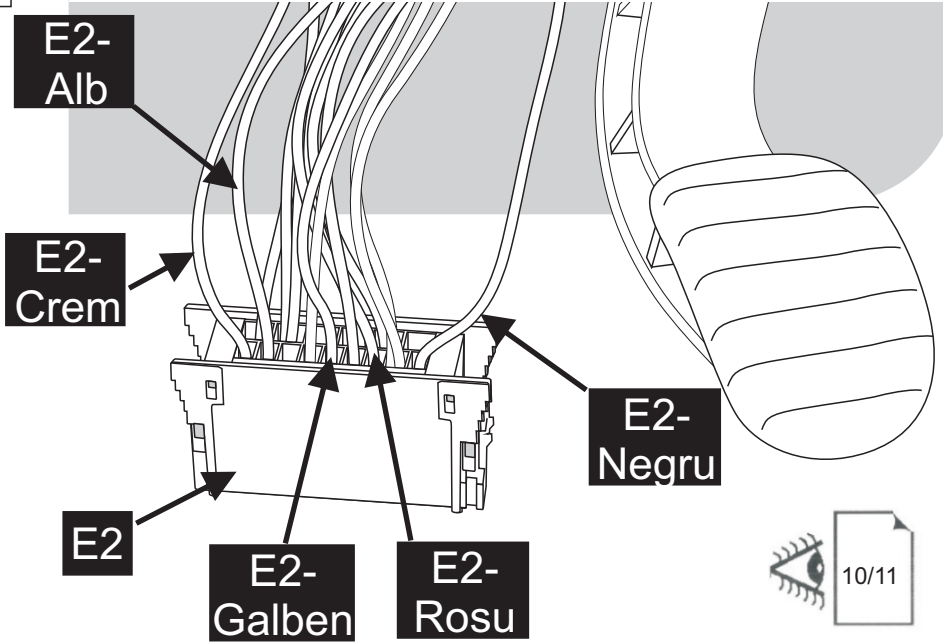


11

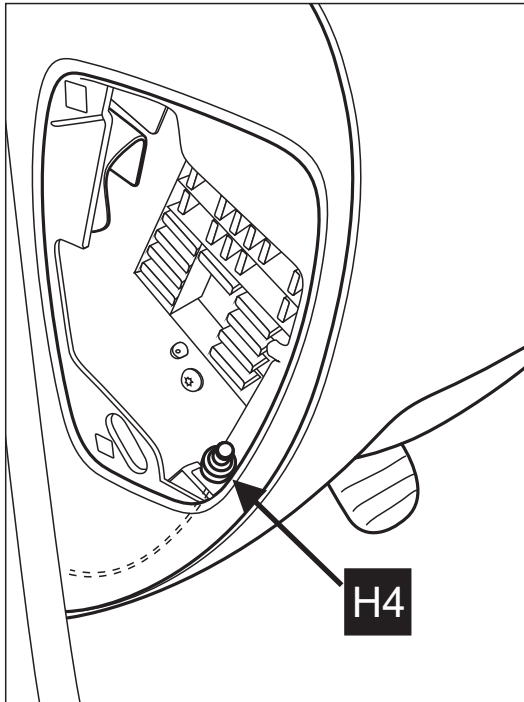


12

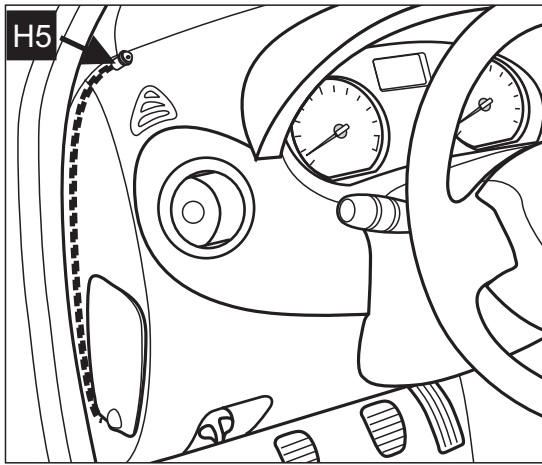


13

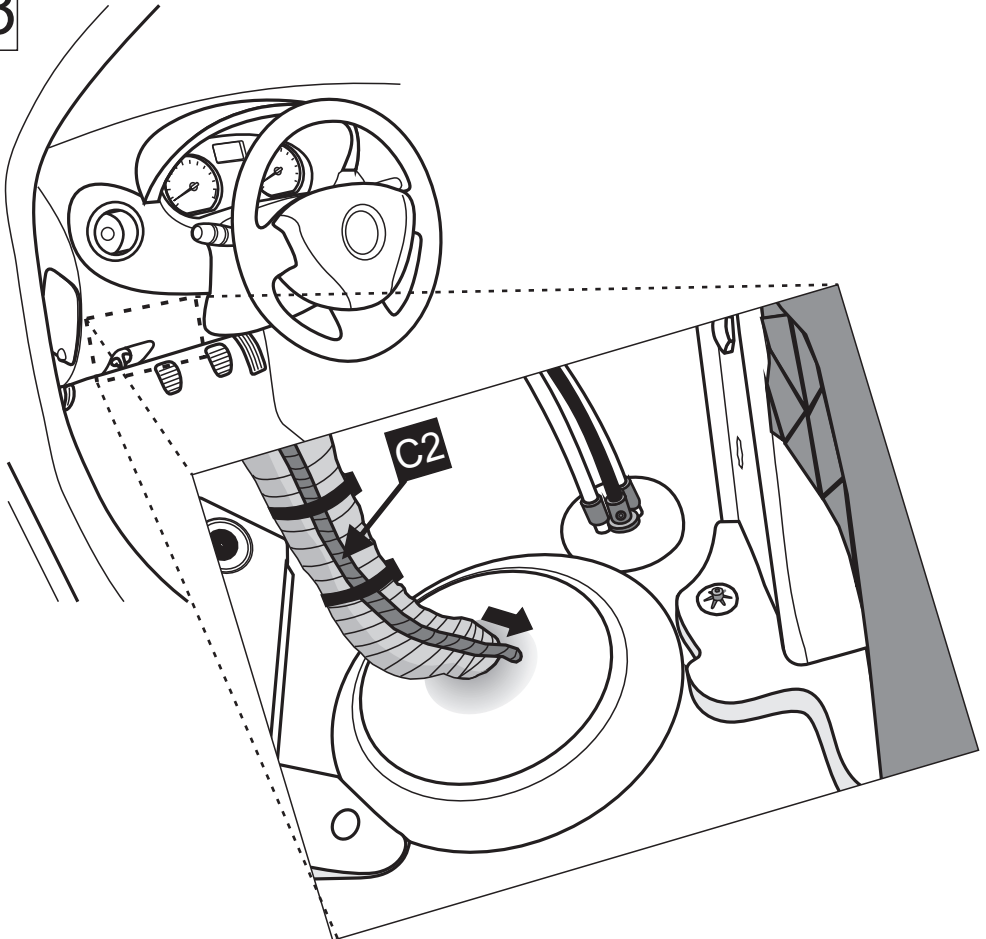


14

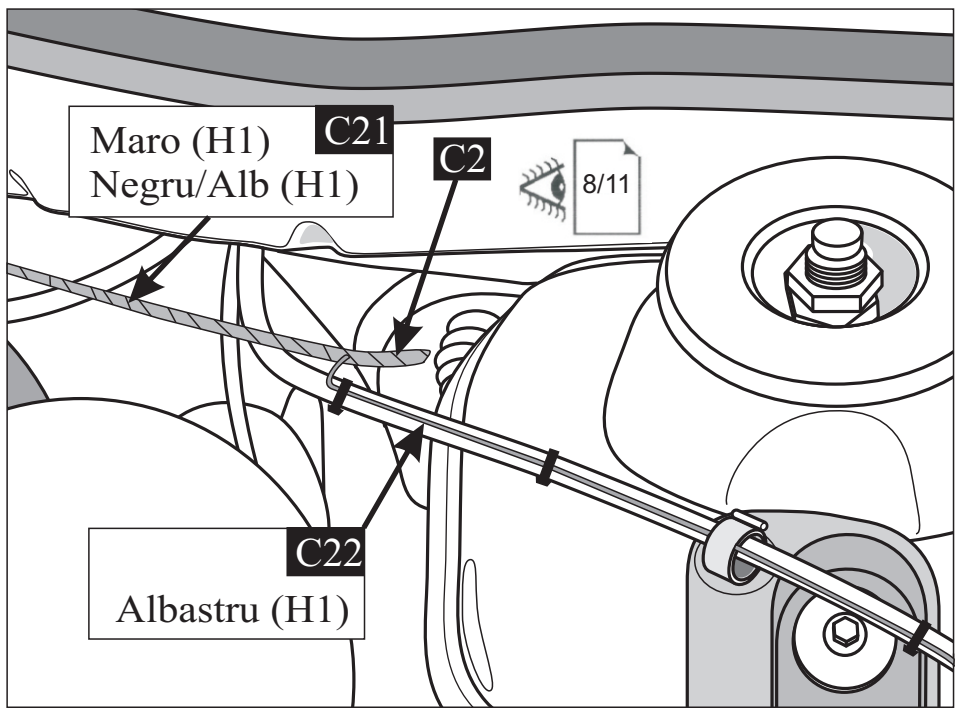


15

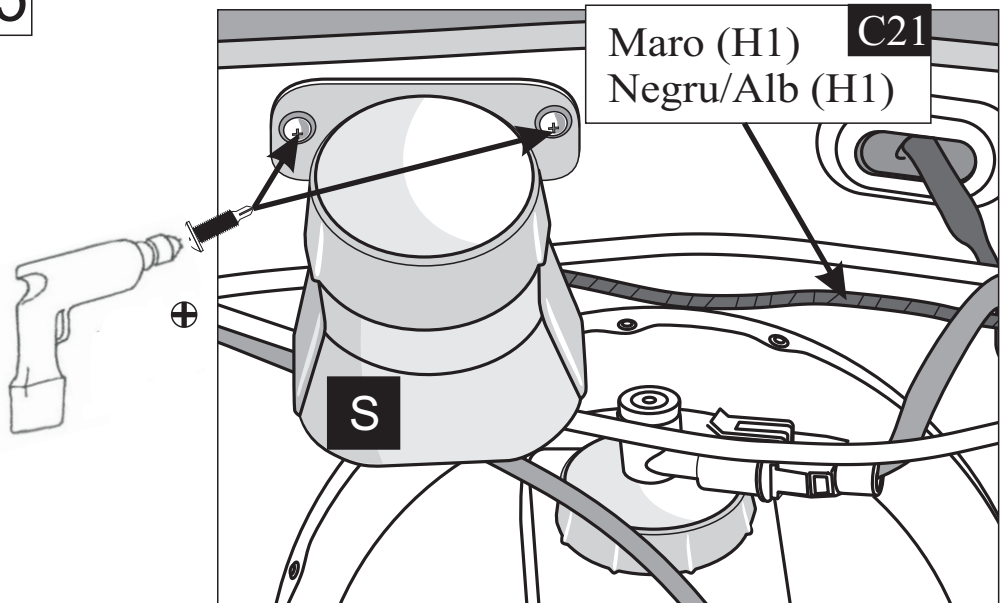


16

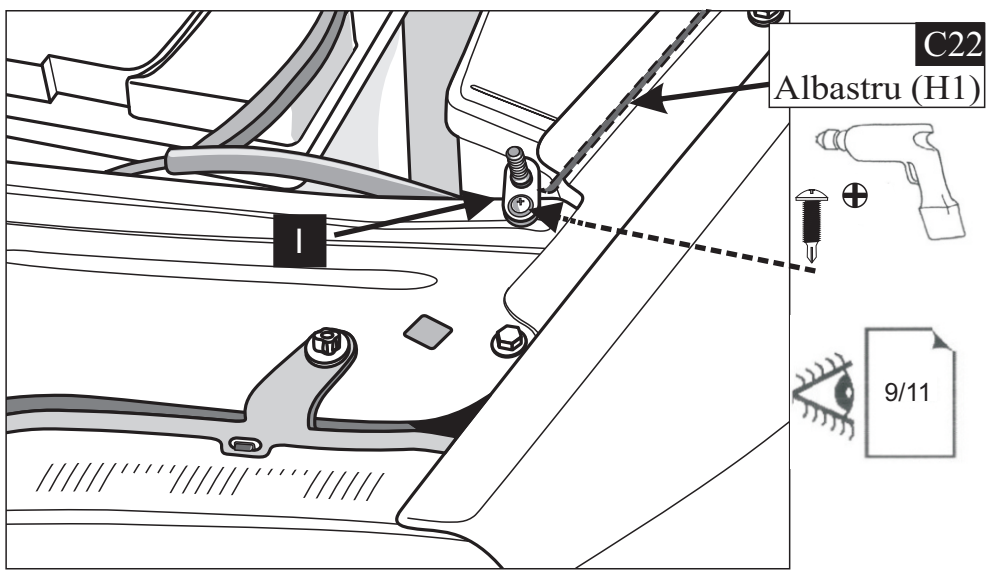

17

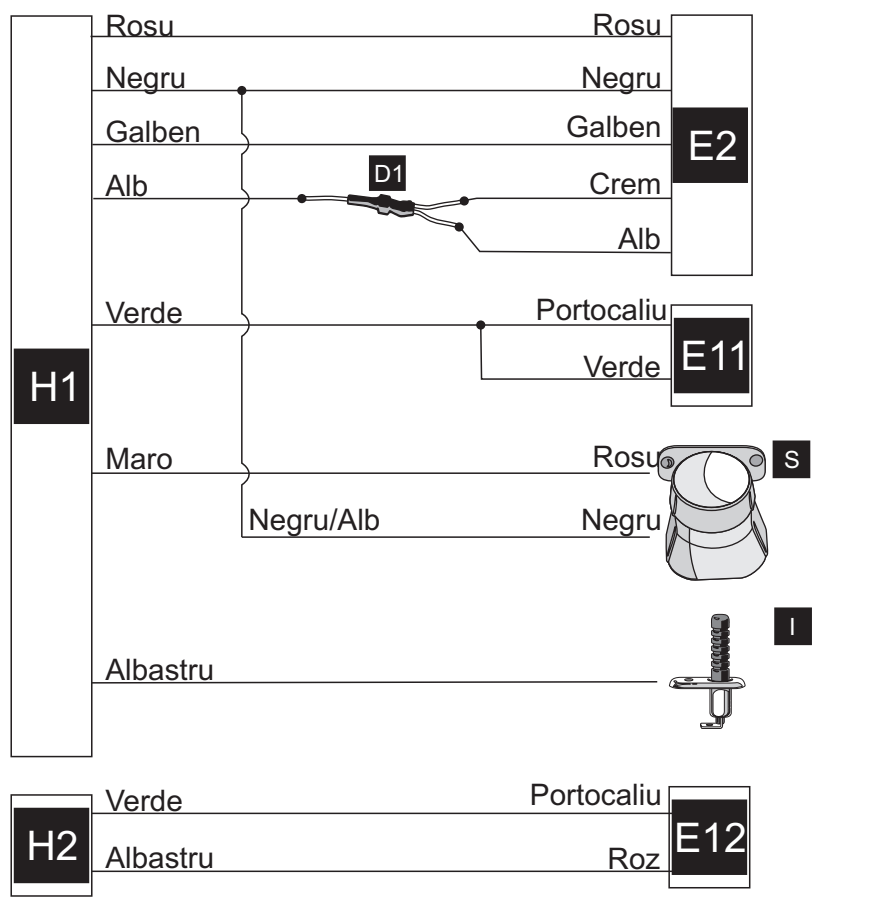

18

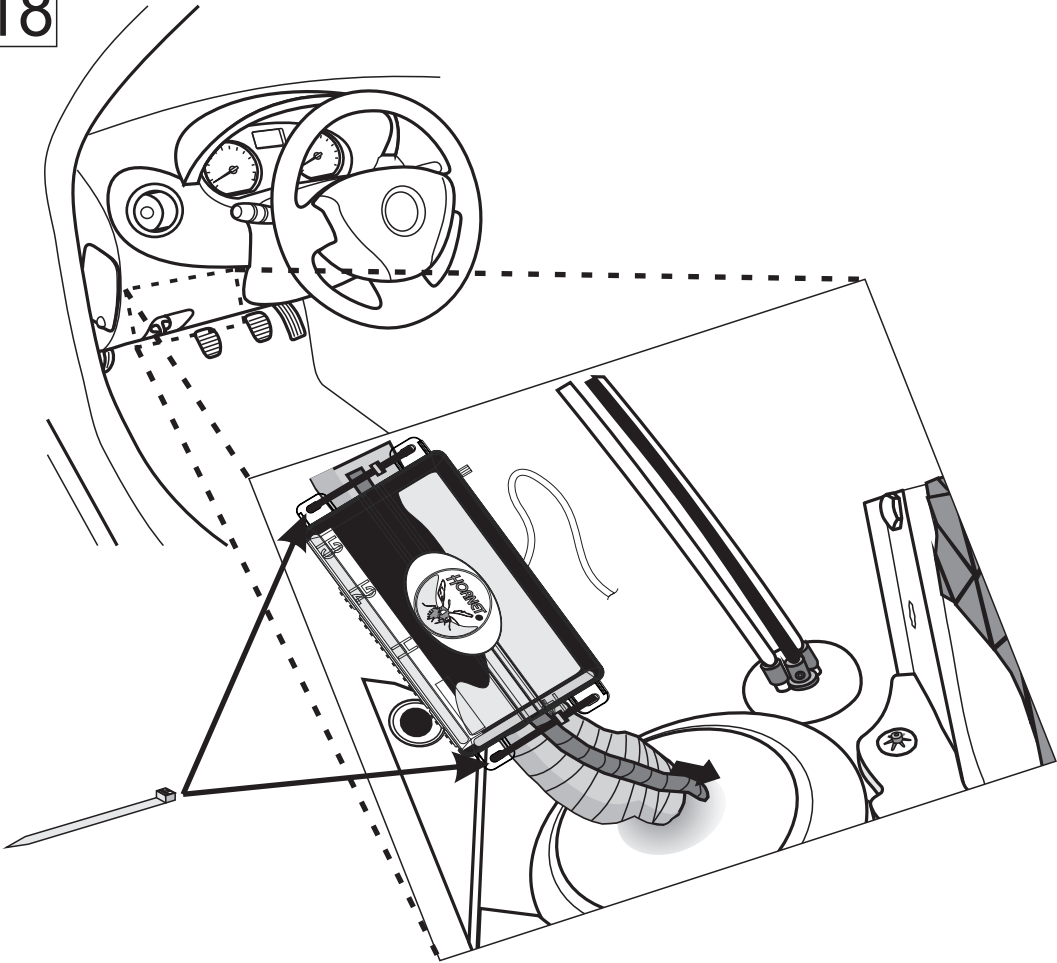

19

